

Limited Warranty Information

Thank you for choosing an Alpine product! We aim to please with our wide range of products including Fountains, Birdbaths, Statuary, Pond Supplies & More. All of our products are constructed from the highest quality materials. In the event that we have not achieved our usual standard of excellence, we will repair or replace, at our discretion, within the warranty period. A valid proof of purchase, with the purchase date clearly indicated, must be provided. Photos of defective merchandise will also be required to help distinguish the actual cause of the defect. Please read below for a detailed description of warranty coverage.

- **Water Damage**

Alpine products are not manufactured to withstand extreme temperatures. Improper storage that allows water to freeze within a product may cause damage and is considered negligence and will, therefore not be covered under this warranty. The use of "hard water" and/or caustic cleaners can affect the paint or other finishes. Failure to keep the unit clean, and use of such additives/cleaners, will also void the warranty. Please note: for fountains, it is normal for some splashing to occur and protecting the immediate surfaces is not the responsibility of Alpine Corporation

- **Paint & Color (Retention and/or Loss)**

The use of water will cause natural erosion to the color. This area can be touched up using standard paint. The paint is designed protect the entire finish against breakdown of color. As with any product, all finishes with time will gradually fade and discolor. The warranty will only cover against severe or complete fading within the first year from date of purchase with the above exclusion.

- **Procedure/Service**

Should a warranty/claim be needed, you should contact the retailer from whom you purchased the product. If that not an option, you can contact Alpine Corporation at www.alpine4u.com. When contacting Alpine Corporation, you must be prepared to show proof of purchase, provide photographs and any other information needed to validate your claim. This may be necessary to distinguish between a partial or complete replacement of a defective product. The warranty does not cover any items with multiple parts; the warranty will ONLY cover the individual component of the unit/item that may be defective. Replacement parts can be made available to a consumer through the original selling party, or an approved parts retailer. If this is not an option, contact our customer service department. Item is covered under one year limited warranty from the date of purchase. When requesting replacement parts due to a warranty claim after 30 days of purchase, credit card information will be requested for shipping charges.

- **Not Covered Under Warranty**

The limited warranty will NOT cover cases of damages due to

1. Damages caused in Transit
2. Inadequate care and/or neglect
3. Environmental and/or natural elements
4. Immersion in water, unless specified
5. Improper Installation/Storage and/or Maintenance

This warranty is void if the product has been damaged by accident, misuse, negligence, improper installation and/or modifications have occurred. This includes any and/or all defects arising out of freezing water damage, hard water damage, failure to keep the unit clean and free of harmful additives such as bleach, chlorine, etc.... which affects the paint and/or parts. This warranty also does not cover any additional charges or installation, removal, disposal and/or shipping costs or consequential damage associated with any warranty claim



FG100 1 Jet Fogger w/ Transformer



Assembling & Using Your Product

Unpack all components carefully. Please check to ensure all parts have been removed from the packaging. Some splashing may occur.

Components:

- Fogger
- Transformer

Assembling:

- Place the fogger into a container of water. Make sure the fogger is placed flat and there is approximately 1-1/2" of water above the ceramic fogger. If the unit is too far under water, it will not produce any fog. (If water level is too low, it will not automatically produce fog).
- Connect the power cable of the fogger with the power cable of the transformer.
- Plug the transformer into an A/C power socket. The red light on the fogger will indicate that the fogger unit is on. If water level is at the correct level, it will automatically begin producing fog.

Maintenance and Ceramic Disk Replacement

After operating the fogger for some time, you may notice a decrease in the amount of fog produced, or it may stop working altogether. This means the brass ceramic piece needs to be cleaned or replaced. Follow the instructions below to do so:

1. Unplug the unit and remove from water container.
2. Using the Alpine tool kit, insert the key into the winding ring and turn counter clockwise. ** KIT NOT INCLUDED
3. Remove the filler piece (washer) and ceramic piece. **IMPORTANT:** note that there is a front and back ceramic disk in the reverse order above. Refer to illustrated instructions on the next page (Figure 1).
4. The inside of the unit cavity must be completely dry before the parts are installed.



Figure 1

Instructions for Optimal Usage

- Alpine would like to suggest adding a few drops of essential oil to add a lovely aroma to your room.
- Suggested usage of fogger is no more than 8 hours per day. Connecting a timer to your transformer will ensure that your fogger will be used only when needed.
- The fogger send up small jets of water while in operation. Your container should be large enough to prevent water from splashing outside the container. Do not place the unit where water spillage or condensation will cause damage to furniture, electronic products, floors, or anything else it may damage.
- Use of the cleanest water is recommended. When the water slowly becomes dirty, please replace with clean water. Dirty water will affect the performance of the fogger.
- Clean the fogger with a soft cloth in clean water if necessary.



Caution:

- Always unplug the fogger from the electrical outlet before cleaning & handling.
- Uses with clean water only, do not place the fountain and/or parts in any other liquid.
- Periodically change water & clean the fogger to keep free from micro-organisms.
- Disconnect and store the unit in a dry place if not in use for an extended period of time.
- Do not operate with water above 90°F or 30°C
- Do not lift, carry or pull the fogger by the power cord
- Do not exceed the maximum voltage & wattage on transformer